

Towbar

6189

Audi

- **A4 (B8)** 09/2007 - 11/2015
- **A4 Avant (B8)** 04/2008 - 11/2015
- **A4 Allroad Quattro (B8)** 06/2009 - 12/2015
- **A5** 06/2007 - 09/2016
- **A5 Sportback** 09/2009 ->
- **A5 Cabrio** 2009 ->
- **S4 / S5 / S5 Sportback (incl. S-line)**

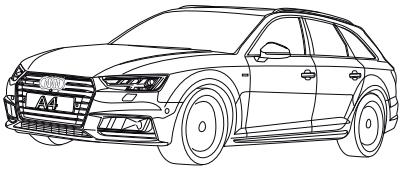


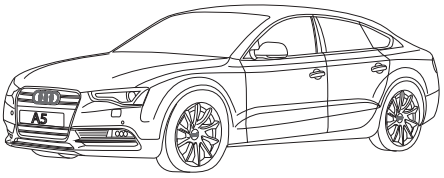


NL Montagehandleiding
GB Fitting instructions
D Montageanleitung
F Instructions de montage
S Monteringsanvisningar
DK Montagevejledning
E Instrucciones de montaje
I Istruzioni per il montaggio
PL Instrukcja montażu
SF Asennusohjeet
CZ Pokyny k montáži
H Szerelési útmutató
RUS Руководство для монтажа

BRINK

Your perfect fit
brink.eu

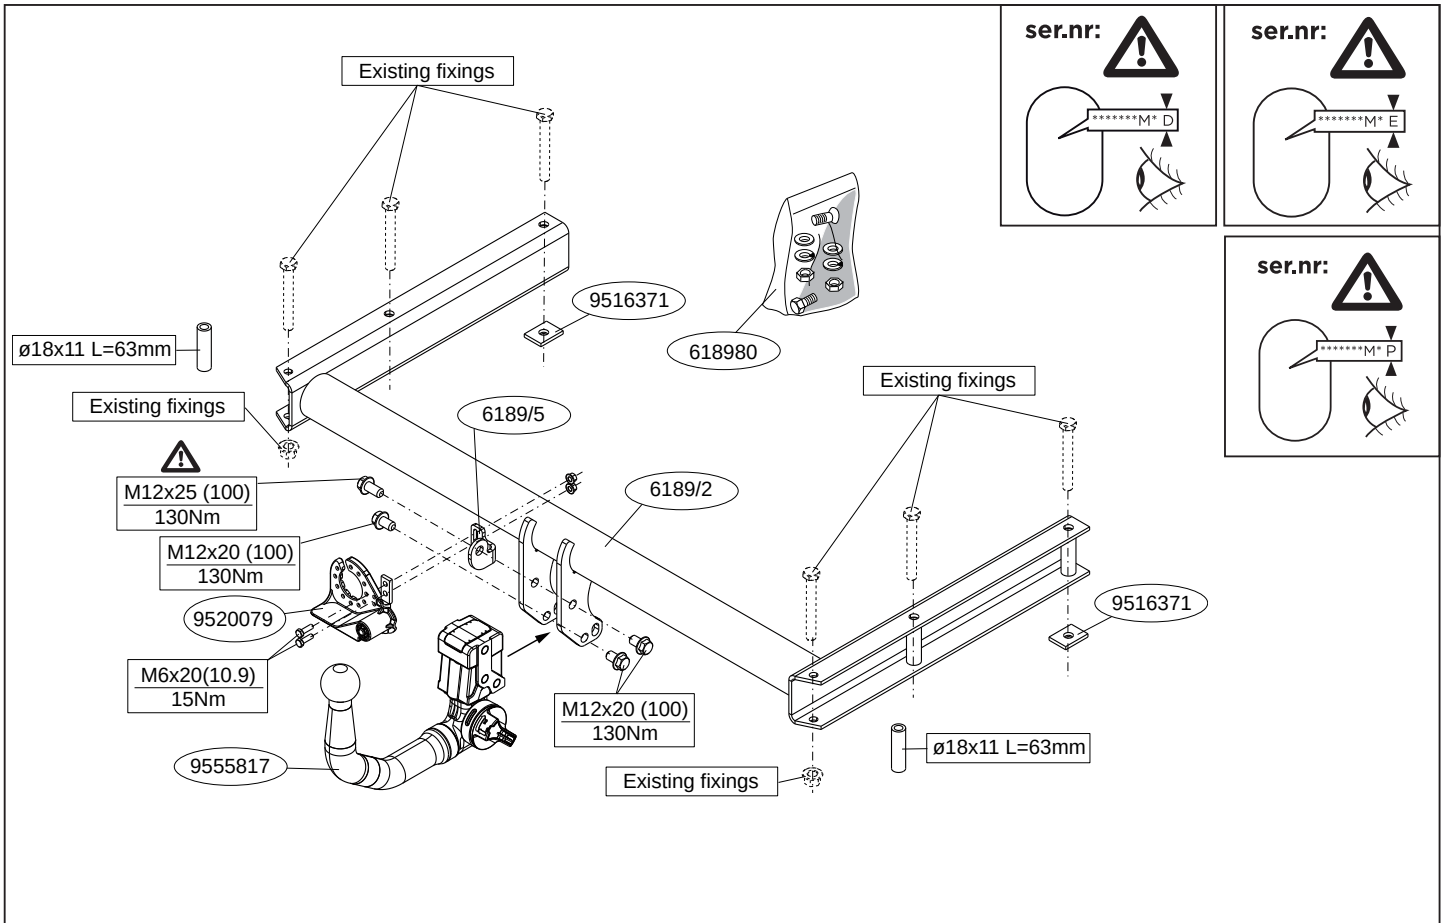

© 618970/08-05-2017/1

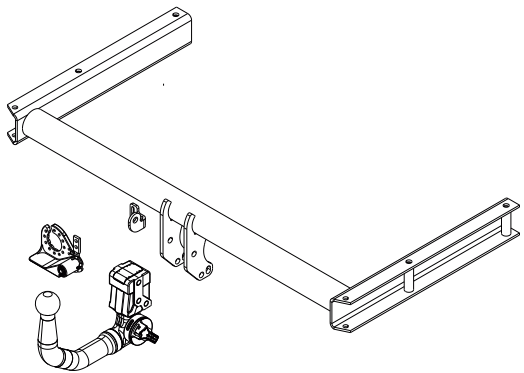











(2x) M6x20 (10.9)



(2x) M6



(3x) M12x20 (00)



(1x) M12x25 (00)




(2x) ø18x11 L=63mm



(2x) M10

© 618970/08-05-2017/2

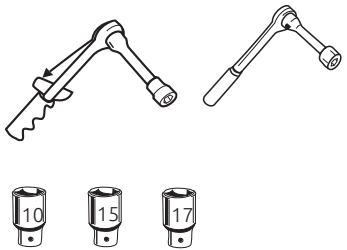


Couplingsclass: A50-X



E11 55R 0110857

ECE R55


D-Value : 11,1 kN

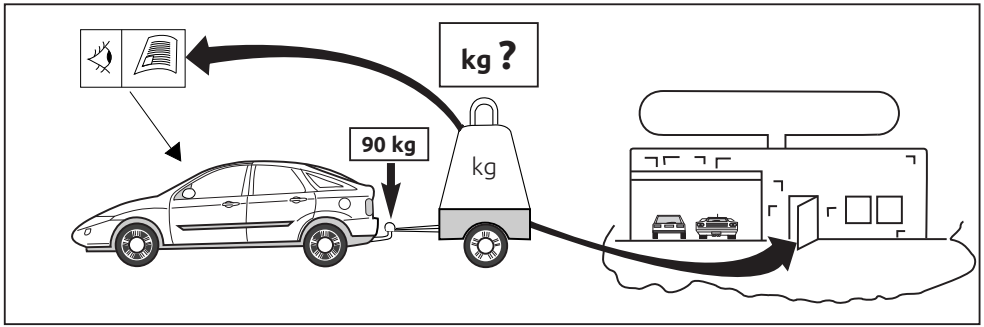



10.9

10

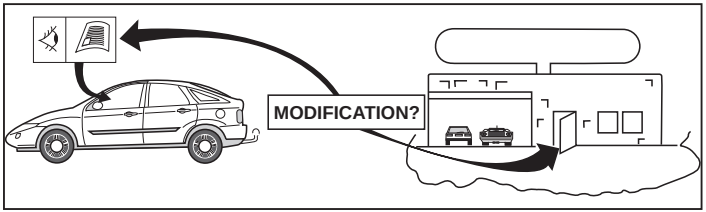

© 618970/08-05-2017/3



NOTE:


*** Should this installation process entail the cutting of the bumper – conformation MUST be obtained by the installation engineer of the customer's acceptance prior to completion. Brink Towing Systems do not accept responsibility for any matters arising as a result of this miscommunication.**

All measurements are in mm!


HINWEISE:

* Die für das Fahrzeug zugelassene Anhängelast ist den Fahrzeug Unterlagen zu entnehmen. Bei Änderungen des Fahrzeuggewichtes muβ die höchstzulässige Anhängelast gegebenenfalls aus dem D-Wert nachgerechnet werden.
  Auskunft hierüber kann Ihr Fachhändler oder der TÜV geben.
* Elektrische Anlage gemäβ StVZO anbringen.

© 618970/08-05-2017/4

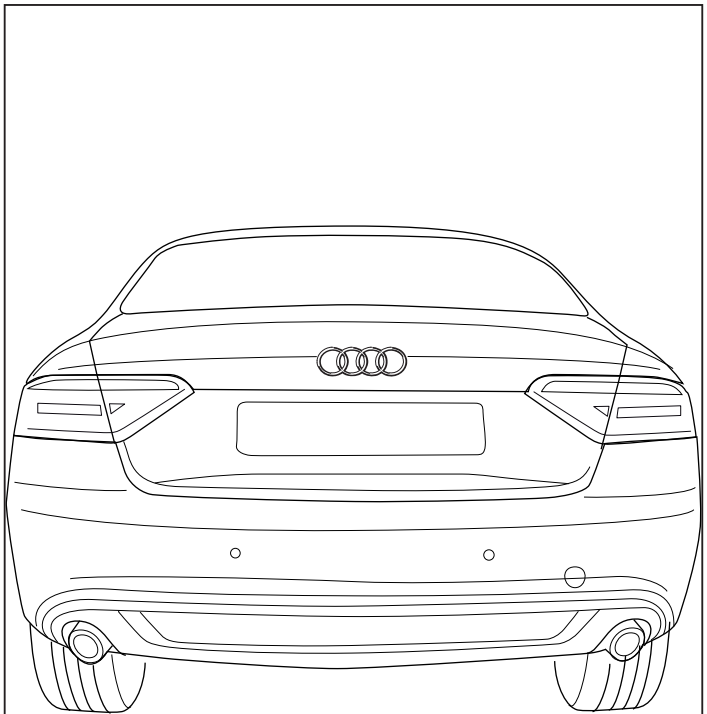


1

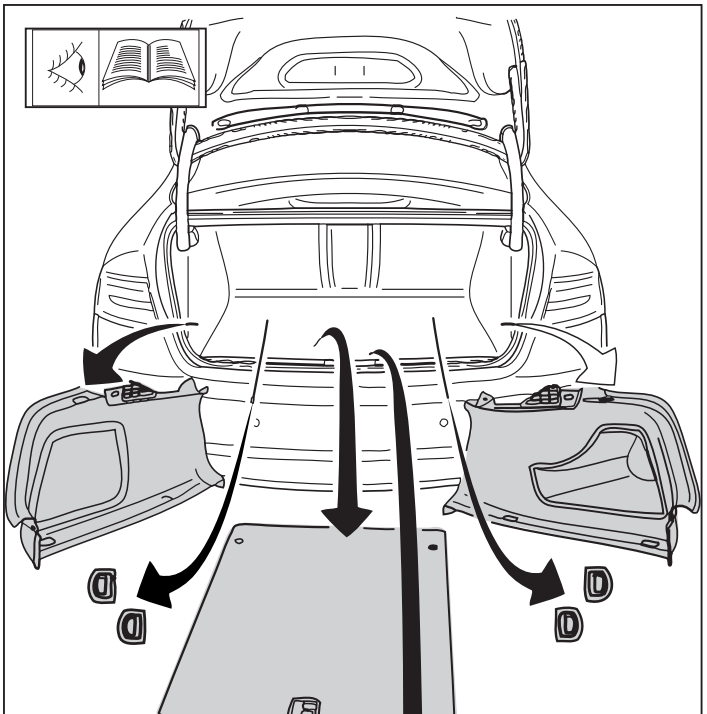


2

© 618970/08-05-2017/5

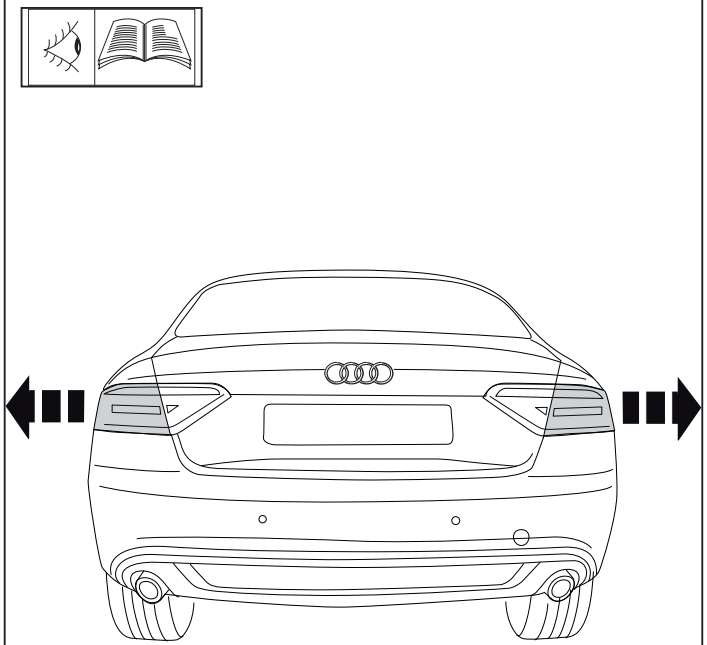


3

Fig. 5

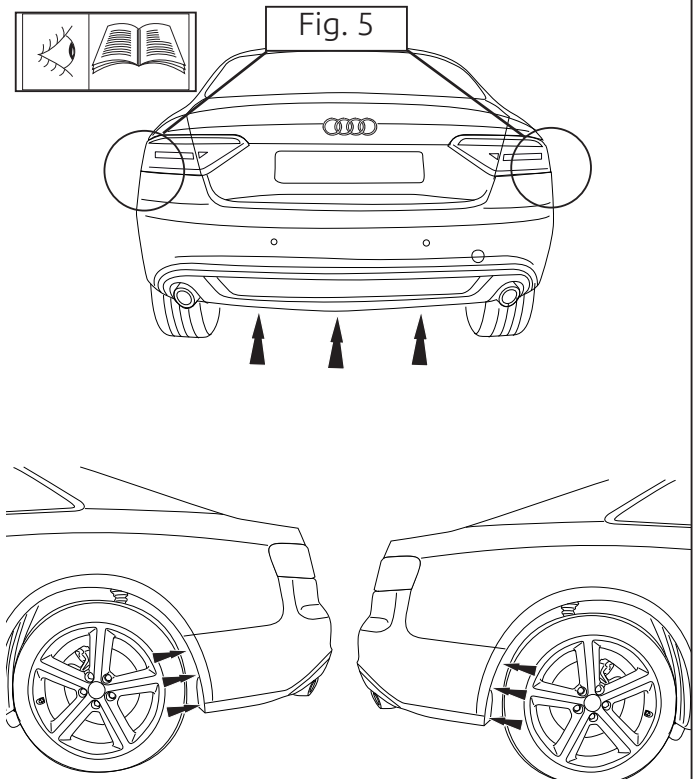



4


© 618970/08-05-2017/6

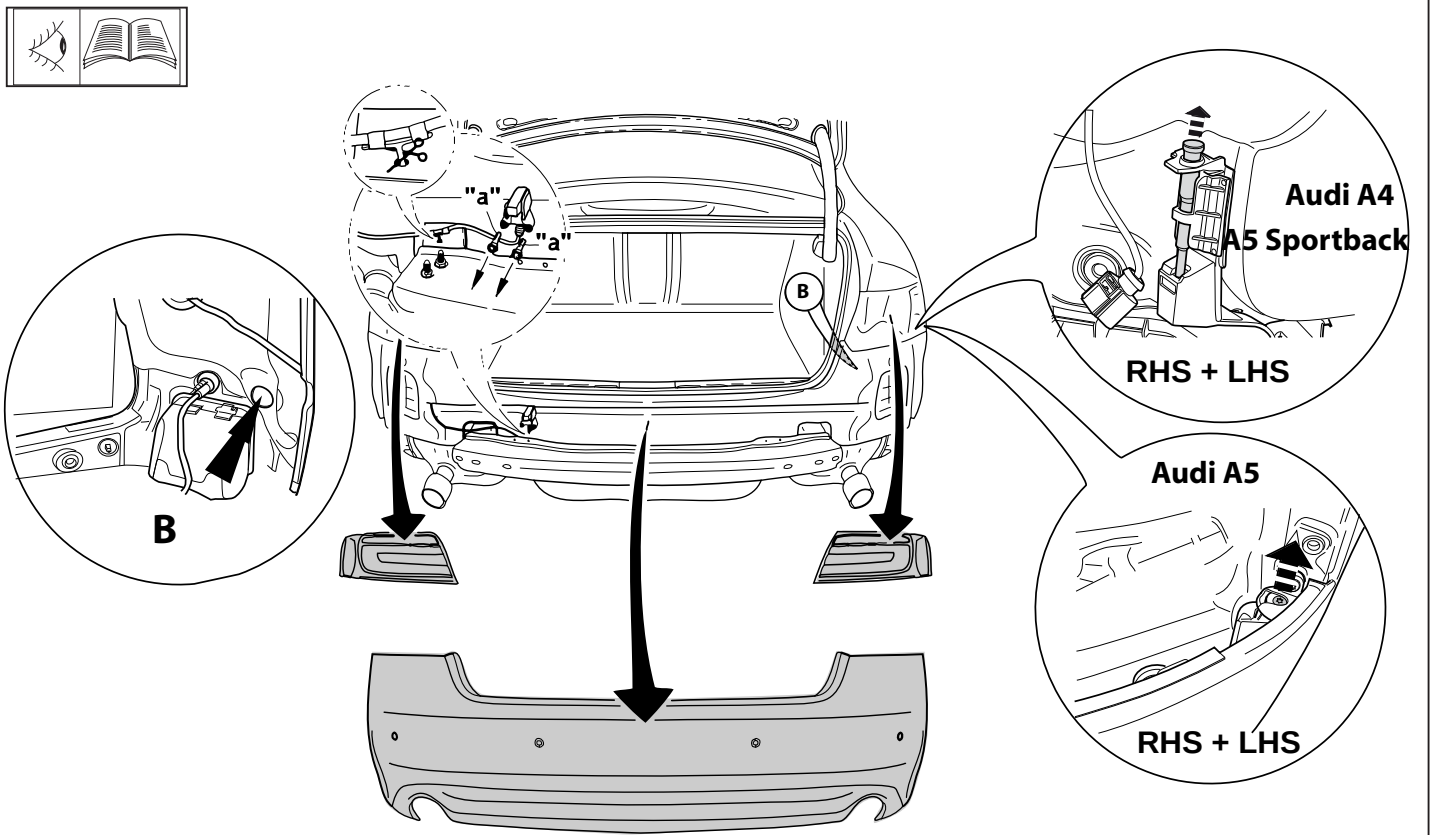


© 618970/08-05-2017/7

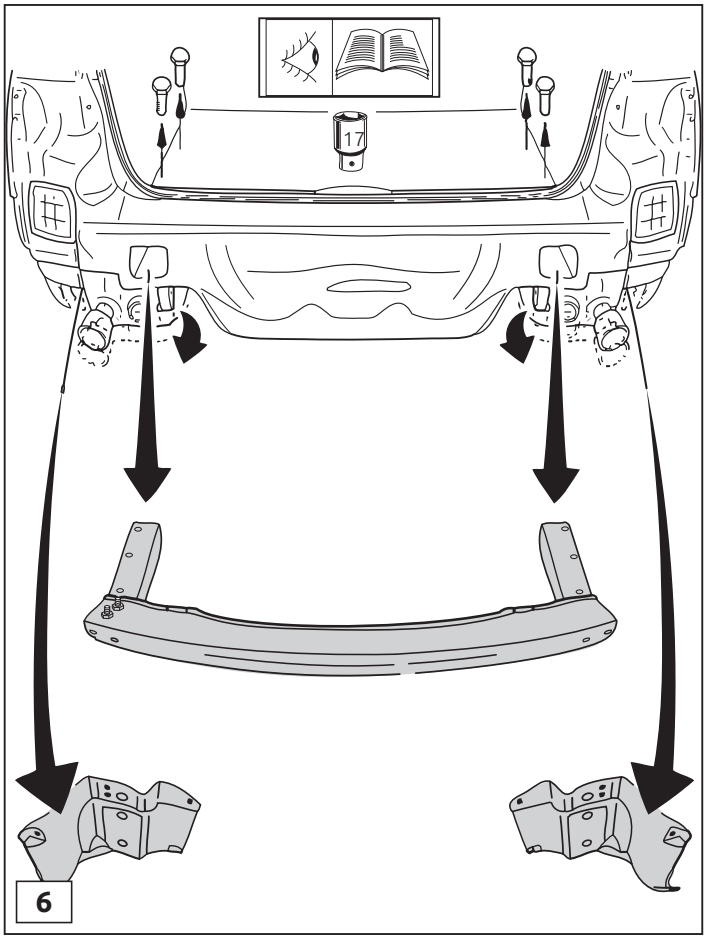


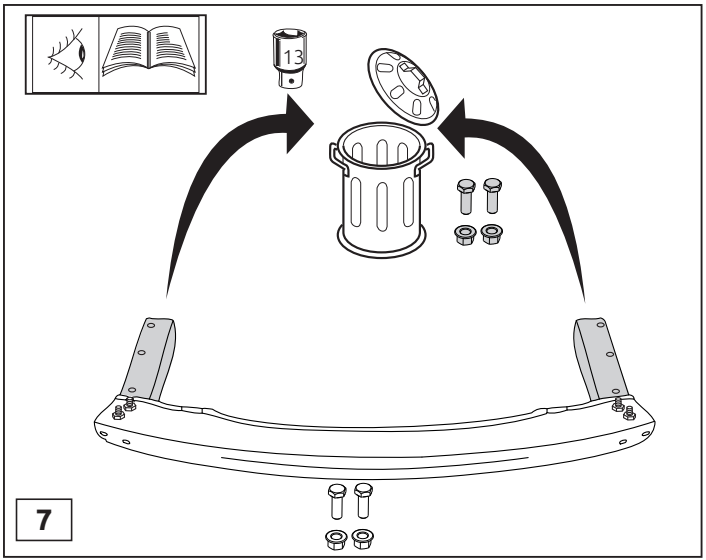

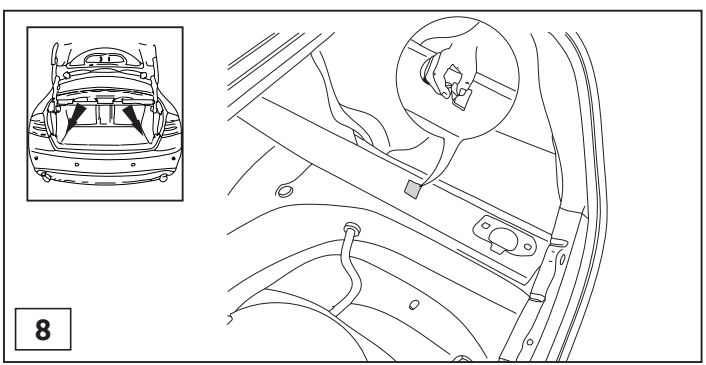



© 618970/08-05-2017/8

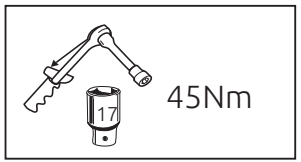

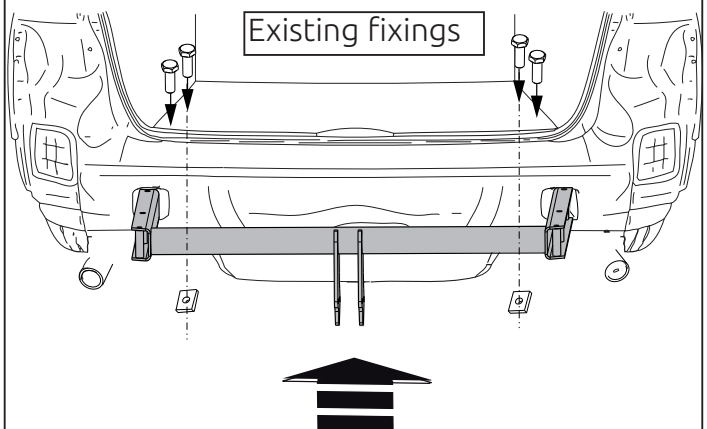


9

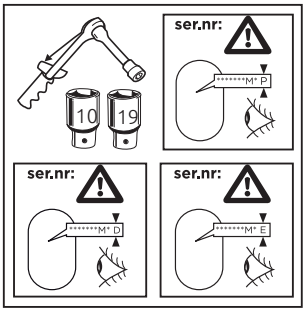

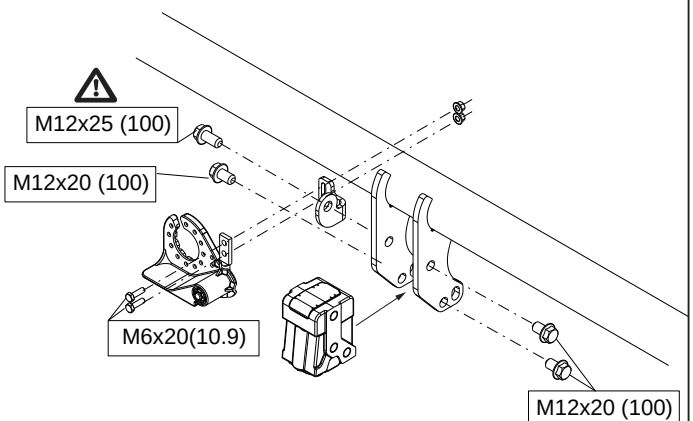


10

© 618970/08-05-2017/9

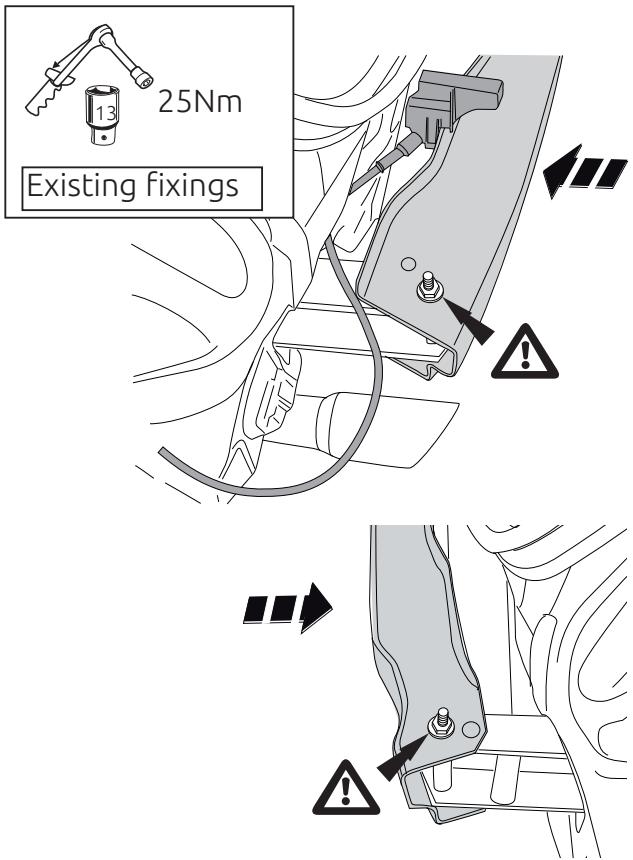


11

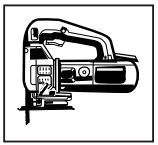

BUMPER WITHOUT HOLE


A4/A5

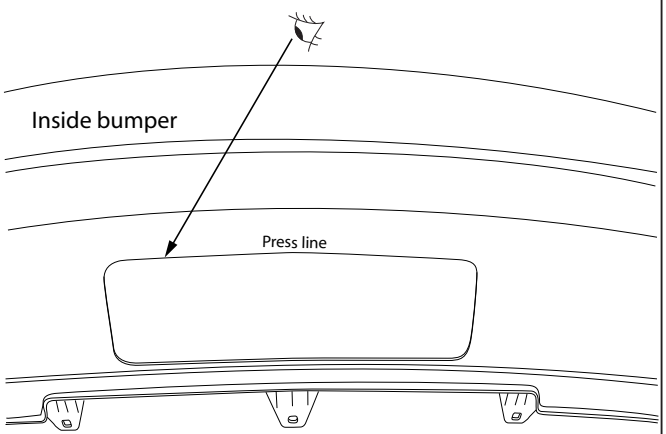

12


© 618970/08-05-2017/10


A4 Allroad , A5 Sportback

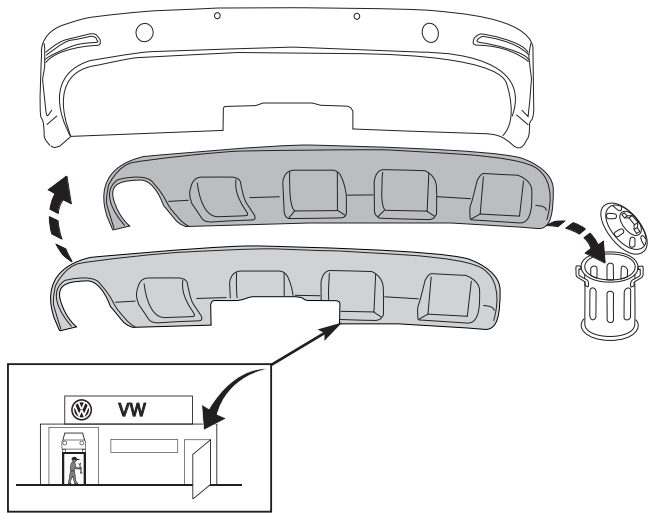


13a

S-line
S5

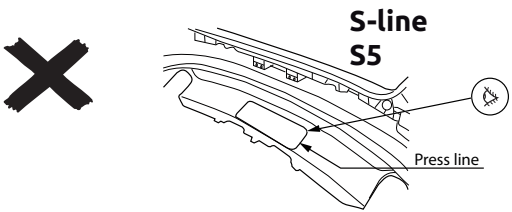


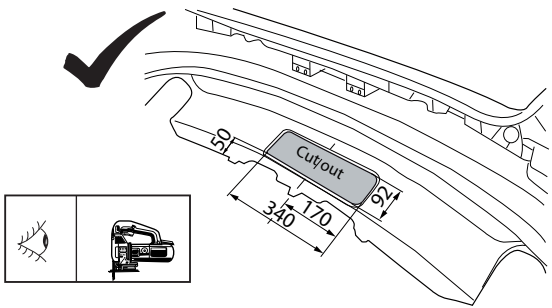


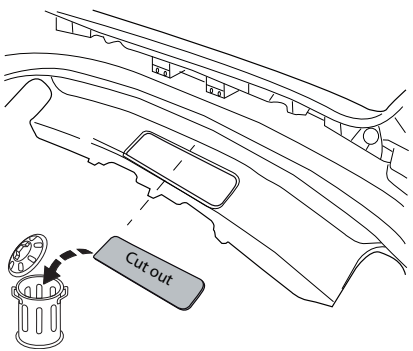


13b


© 618970/08-05-2017/11

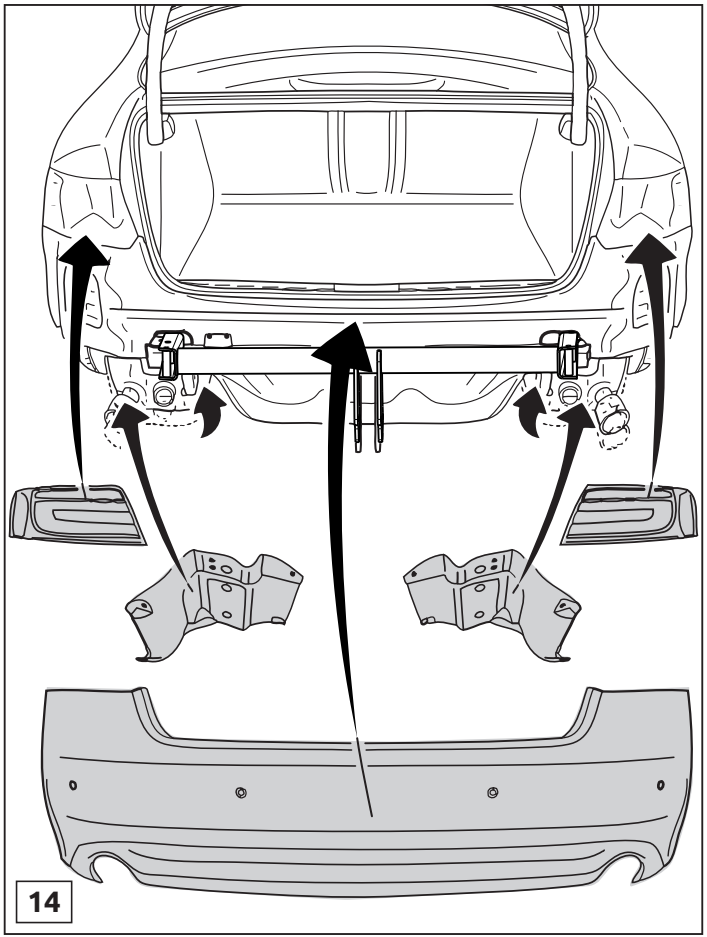

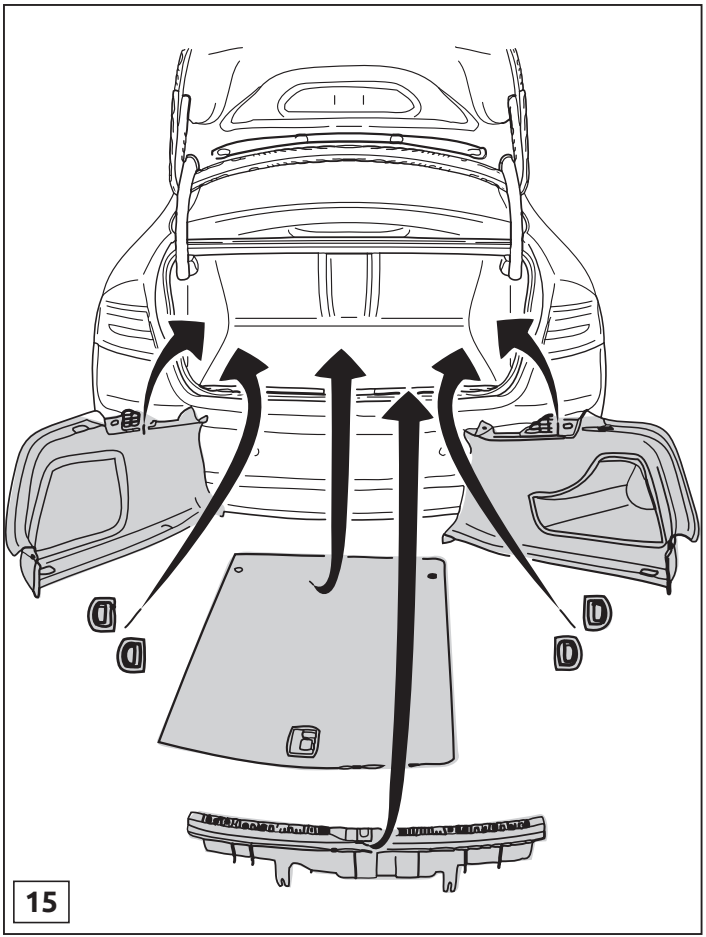

© 618970/08-05-2017/12

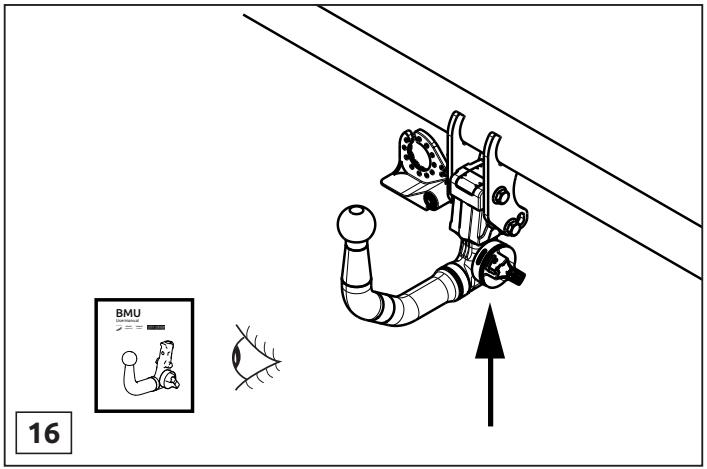

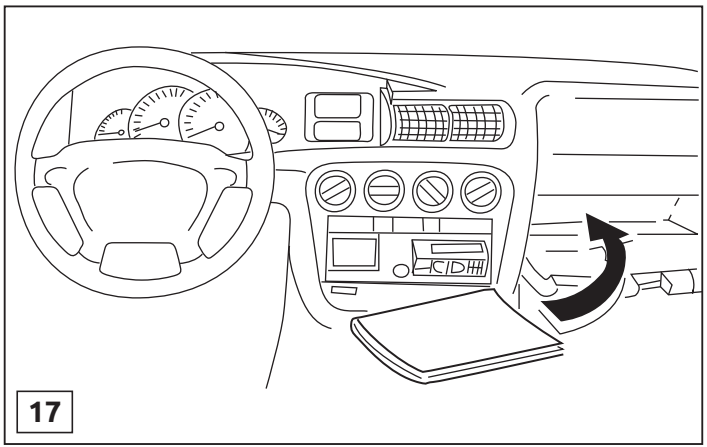

© 618970/08-05-2017/13

© 618970/08-05-2017/14